




BEER PANELS INSTALLATION INSTRUCTIONS

Glastender, Inc. · North Michigan Road · Saginaw, MI · 48604-9780
800.748.0423 · 989.752.4275 · Fax 800.838.0888 / 989.752.4444 · www.glastender.com

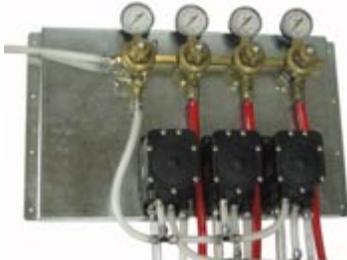

BPIK, Beer Pump Panel
Page 2



BPIK-E, Beer Pump Panel with Empty Keg Detector
Page 3



BPIK-Y, Beer Pump Panel with Y Angle Bracket
Page 4



BPIK-EY, Beer Pump Panel with Empty Keg Detector
& Y Angle Bracket
Page 5



BIK, Beer Panel
Page 6



BIK-E, Beer Panel with Empty Keg Detector
Page 7



BIK-Y, Beer Panel with Y Angle Bracket
page 8




BIK-EY, Beer Panel with Empty Keg Detector &
Y Angle Bracket
Page 9



BPIK Beer Pump Panel Installation Instructions

These instructions assume that the primary regulator and CO2 line to the walk-in cooler are already installed.

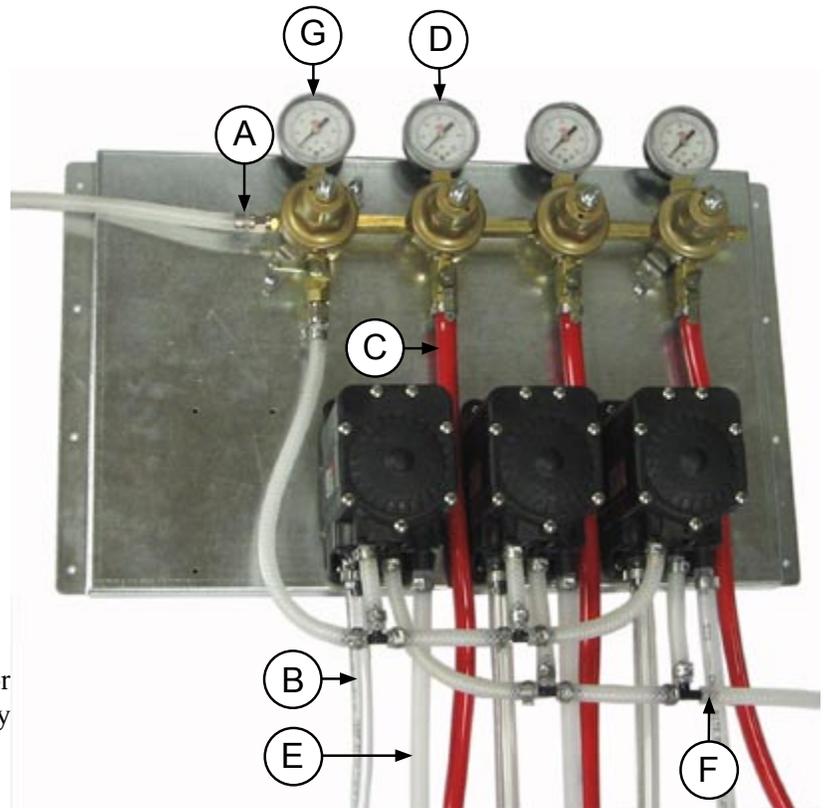


1. Position the regulator panels according to factory instructions.
2. Connect CO2 source line to one end (A) of regulator bank. If there is more than one panel, continue the line to the next panel until all panels are connected.
3. Approximately 9 feet of clear vinyl beer line (B) is provided for the keg jumper line from each keg to its beer pump. Trim clear line to size and attach one end to the input port of the beer pump and the other end to the keg tap. The beer pump ports are shipped loose in a bag attached to the regulator.
4. Approximately 9-1/2 feet of red air line (C) is provided for the jumper line from each keg to its regulator (D). Trim red air line to size and attach one end to the regulator and the other end to the keg tap.
5. Attach the polyline (E) provided in the beer line set (conduit) to the output port of each pump.
6. The CO2 exhaust port of each pump has been pre-plumbed at the factory to create one CO2 exhaust port connection (F). Use the CO2 line provided to exit the CO2 from the walk-in cooler. An extra tee is provided with each panel in case you want to join the exhaust lines of adjacent panels. **THE EXHAUST PORT OF EACH PUMP MUST BE VENTED OUTSIDE THE WALK-IN.**
7. The keg regulators (D) provide individual pressure to each keg. Set each keg regulator at the keg's natural internal head pressure, normally between 12 to 16 pounds. To get to the natural head pressure level for the keg, start with the regulator set around 10 pounds. Draw beer through the line. If bubbles appear in the clear keg jumper line, then the pressure should be adjusted upward slightly. Repeat until the bubbles do not form in the line. Be careful not to set the pressure too high or the beer will over-carbonate. **NOTE: This step needs to be done in conjunction with step #8 until proper results are achieved.**
8. The beer pump regulator (G) controls the pressure going to the beer pumps on that panel. Each pump on the panel receives the same level of pressure, which is intended for beer lines traveling to the same tower (i.e. same length of beer line). Upon start-up, the beer pump regulator should be set at a pressure level that provides the proper flow rate. Start around 10 pounds and work up from there to achieve a 2 ounces per second flow rate.

NOTE: If supplied, empty keg detectors (FOB stops) should be mounted after the beer pump.



BPIK-E Beer Pump Panel Installation Instructions

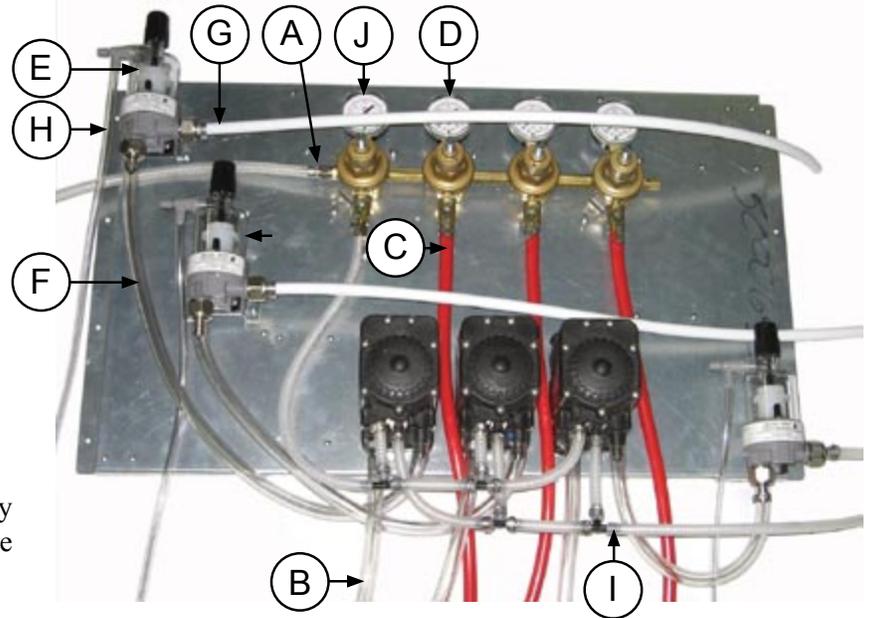


These instructions assume that the primary regulator and CO2 line to the walk-in cooler are already installed.

1. Position the regulator panels according to factory instructions.
2. Connect CO2 source line to one end (A) of regulator bank. If there is more than one panel, continue the line to the next panel until all panels are connected
3. Approximately 9 feet of clear vinyl beer line (B) is provided for the keg jumper line from each keg to its beer pump. Trim clear line to size and attach one end to the input port of the beer pump and the other end to the keg tap. The beer pump ports are shipped loose in a bag attached to the regulator.
4. Approximately 9-1/2 feet of red air line (C) is provided for the jumper line from each keg to its regulator (D). Trim red air line to size and attach one end to the regulator and the other end to the keg tap.
5. Attach an Empty Keg Detector (E) to each of the black EKD mounting brackets by sliding them in place. The EKD can be mounted to flow left or right. The standard set up is to flow left. The EKDs may need to be repositioned if right flow is required. The panel has pre-punched holes to allow repositioning of the EKDs if necessary.
6. Attach the appropriately numbered, pre-made jumper line (F) from the output port of each pump to the bottom input port of its EKD. Use a black washer on the EKD end.
7. Attach the polyline (G) from the beer line set (conduit) to the side output port of each EKD.
8. Approximately 6 feet of exhaust line (H) is provided for the exhaust port of each EKD. Trim the exhaust line to length and attach to each EKD exhaust port so the exhaust can be drained to a bucket. No clamp is required.
9. The CO2 exhaust port of each pump has been pre-plumbed at the factory to create one CO2 exhaust port connection (I). Use the CO2 line provided to exit the CO2 from the walk-in cooler. An extra tee is provided with each panel in case you want to join the exhaust lines of adjacent panels. **THE EXHAUST PORT OF EACH PUMP MUST BE VENTED OUTSIDE THE WALK-IN.**
10. The keg regulators (D) provide individual pressure to each keg. Set each keg regulator at the keg's natural internal head pressure, normally between 12 to 16 pounds. To get to the natural head pressure level for the keg, start with the regulator set around 10 pounds. Draw beer through the line. If bubbles appear in the clear keg jumper line, then the pressure should be adjusted upward slightly. Repeat until the bubbles do not form in the line. Be careful not to set the pressure too high or the beer will over-carbonate. **NOTE: This step needs to be done in conjunction with step #8 until proper results are achieved.**
11. The beer pump regulator (J) controls the pressure going to the beer pumps on that panel. Each pump on the panel receives the same level of pressure, which is intended for beer lines traveling to the same tower (i.e. same length of beer line). Upon start-up, the beer pump regulator should be set at a pressure level that provides the proper flow rate. Start around 10 pounds and work up from there to achieve a 2 ounces per second flow rate.



BPIK-Y Beer Pump Panel Installation Instructions

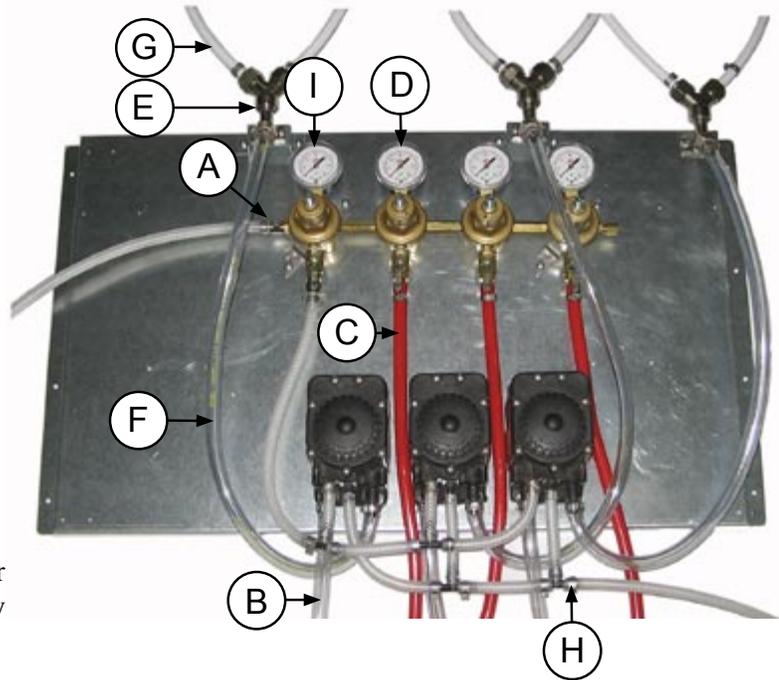


These instructions assume that the primary regulator and CO2 line to the walk-in cooler are already installed.

1. Position the regulator panels according to factory instructions.
2. Connect CO2 source line to one end (A) of regulator bank. If there is more than one panel, continue the line to the next panel until all panels are connected
3. Approximately 9 feet of clear vinyl beer line (B) is provided for the keg jumper line from each keg to its beer pump. Trim clear line to size and attach one end to the input port of the beer pump and the other end to the keg tap. The beer pump ports are shipped loose in a bag attached to the regulator.
4. Approximately 9-1/2 feet of red air line (C) is provided for the jumper line from each keg to its regulator (D). Trim red air line to size and attach one end to the regulator and the other end to the keg tap.
5. Attached to each Y angle bracket (E) is a clear jumper line (F). Attach the pump port end of the clear jumper line to the appropriate pump output port.
6. Attach the polyline (G) from the beer line set (conduit) to the top output ports of each Y angle bracket.
7. The CO2 exhaust port of each pump has been pre-plumbed at the factory to create one CO2 exhaust port connection (H). Use the CO2 line provided to exit the CO2 from the walk-in cooler. An extra tee is provided with each panel in case you want to join the exhaust lines of adjacent panels. **THE EXHAUST PORT OF EACH PUMP MUST BE VENTED OUTSIDE THE WALK-IN.**
8. The keg regulators (D) provide individual pressure to each keg. Set each keg regulator at the keg's natural internal head pressure, normally between 12 to 16 pounds. To get to the natural head pressure level for the keg, start with the regulator set around 10 pounds. Draw beer through the line. If bubbles appear in the clear keg jumper line, then the pressure should be adjusted upward slightly. Repeat until the bubbles do not form in the line. Be careful not to set the pressure too high or the beer will over-carbonate. **NOTE: This step needs to be done in conjunction with step #8 until proper results are achieved.**
9. The beer pump regulator (I) controls the pressure going to the beer pumps on that panel. Each pump on the panel receives the same level of pressure, which is intended for beer lines traveling to the same tower (i.e. same length of beer line). Upon start-up, the beer pump regulator should be set at a pressure level that provides the proper flow rate. Start around 10 pounds and work up from there to achieve a 2 ounces per second flow rate.




BPIK-EY Beer Pump Panel Installation Instructions

These instructions assume that the primary regulator and CO2 line to the walk-in cooler are already installed.

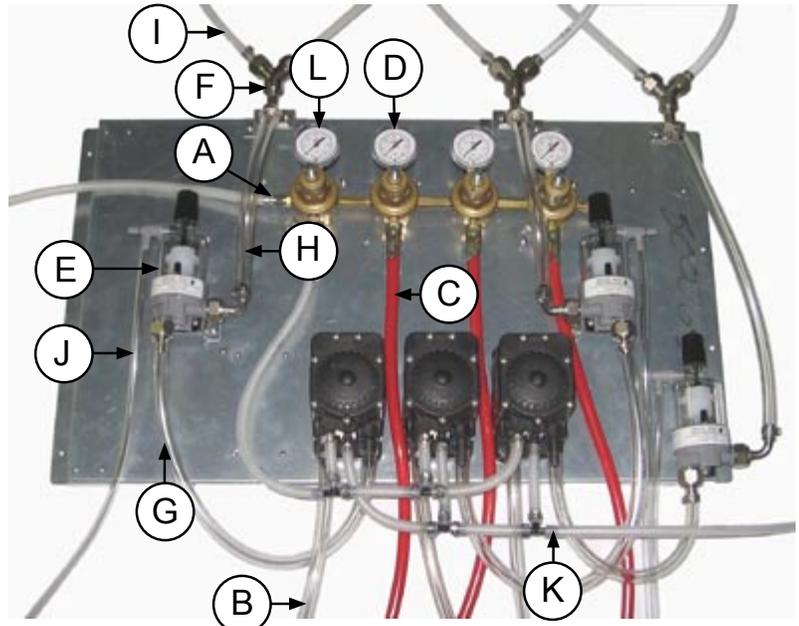


1. Position the regulator panels according to factory instructions.
2. Connect CO2 source line to one end (A) of regulator bank. If there is more than one panel, continue the line to the next panel until all panels are connected
3. Approximately 9 feet of clear vinyl beer line (B) is provided for the keg jumper line from each keg to its beer pump. Trim clear line to size and attach one end to the input port of the beer pump and the other end to the keg tap. The beer pump ports are shipped loose in a bag attached to the regulator.
4. Approximately 9-1/2 feet of red air line (C) is provided for the jumper line from each keg to its regulator (D). Trim red air line to size and attach one end to the regulator and the other end to the keg tap.
5. Attach an Empty Keg Detector (E) to each of the black EKD mounting brackets by sliding them in place. The EKD can be mounted to flow left or right. Position them so that the EKD output port points in the appropriate direction to flow to the corresponding Y angle bracket (F).
6. Attach the appropriately numbered, pre-made jumper line (G) from the output port of each pump to the bottom input port of its EKD. Use a black washer on the EKD end.
7. Attached to each Y angle bracket (F) is a clear jumper line (H). Attach the free end of the clear jumper line to the appropriate EKD side output port, using a black washer.
8. Attach the polyline (I) from the beer line set (conduit) to the top output ports of each Y angle bracket.
9. Approximately 6 feet of exhaust line (J) is provided for the exhaust port of each EKD. Trim the exhaust line to length and attach to each EKD exhaust port so the exhaust can be drained to a bucket. No clamp is required.
10. The CO2 exhaust port of each pump has been pre-plumbed at the factory to create one CO2 exhaust port connection (K). Use the CO2 line provided to exit the CO2 from the walk-in cooler. An extra tee is provided with each panel in case you want to join the exhaust lines of adjacent panels. **THE EXHAUST PORT OF EACH PUMP MUST BE VENTED OUTSIDE THE WALK-IN.**
11. The keg regulators (D) provide individual pressure to each keg. Set each keg regulator at the keg's natural internal head pressure, normally between 12 to 16 pounds. To get to the natural head pressure level for the keg, start with the regulator set around 10 pounds. Draw beer through the line. If bubbles appear in the clear keg jumper line, then the pressure should be adjusted upward slightly. Repeat until the bubbles do not form in the line. Be careful not to set the pressure too high or the beer will over-carbonate. **NOTE: This step needs to be done in conjunction with step #8 until proper results are achieved.**
12. The beer pump regulator (L) controls the pressure going to the beer pumps on that panel. Each pump on the panel receives the same level of pressure, which is intended for beer lines traveling to the same tower (i.e. same length of beer line). Upon start-up, the beer pump regulator should be set at a pressure level that provides the proper flow rate. Start around 10 pounds and work up from there to achieve a 2 ounces per second flow rate.

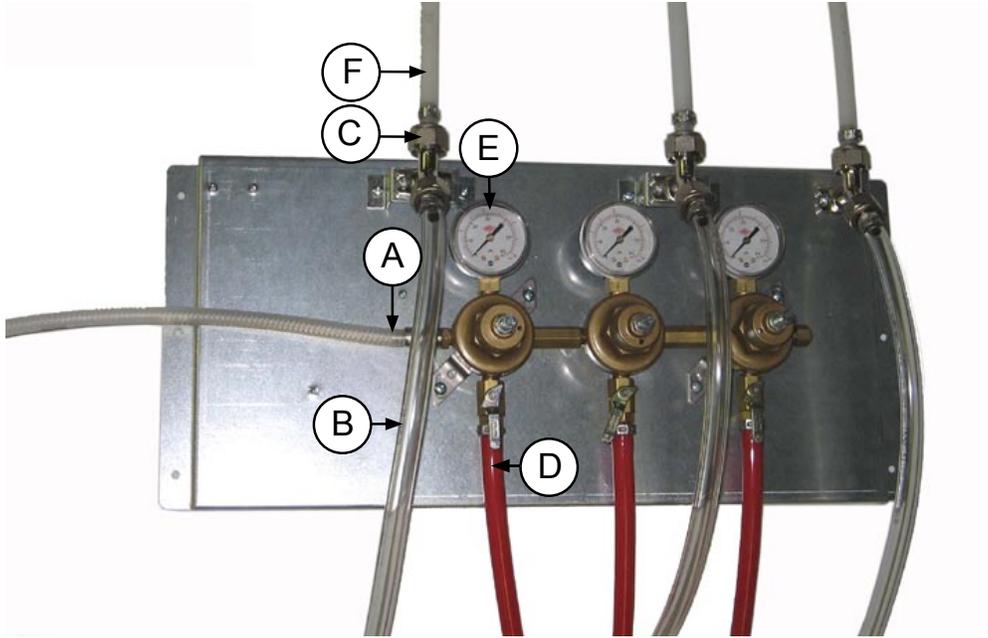


These instructions assume that the primary regulator and CO2 line to the walk-in cooler are already installed.

1. Position the regulator panels according to factory instructions.
2. Connect CO2 source line to one end of regulator bank (A). If there is more than one panel, continue the line to the next panel until all panels are connected.
3. Approximately 9 feet of clear vinyl beer line (B) is provided for the keg jumper line from each keg to its angle bracket (C). Trim clear line to size and attach one end to bottom of angle bracket and the other end to the keg tap.
4. Approximately 9 feet of red air line (D) is provided for the jumper line from each keg to its regulator (E). Trim red air line to size and attach one end to the regulator and the other end to the keg tap.
5. Attach the polyline (F) provided in the beer line set (conduit) to the top of each angle bracket (C).
6. The keg regulators (E) provide individual pressure to each keg. Upon start up, the ideal gauge pressure will depend on the type of gas involved as well as the length of the line runs. The goal is to achieve a flow rate of 2 ounces per second.

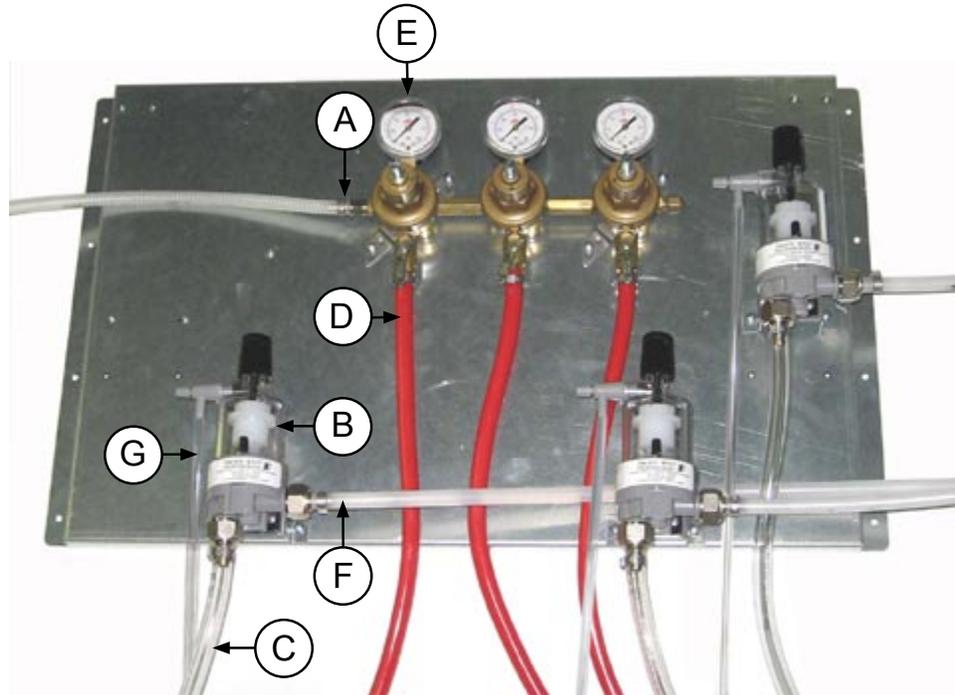

These instructions assume that the primary regulator and CO2 line to the walk-in cooler are already installed.

1. Position the regulator panels according to factory instructions.
2. Connect CO2 source line to one end of regulator bank (A). If there is more than one panel, continue the line to the next panel until all panels are connected
3. Attach an Empty Keg Detector (B) to each of the black EKD mounting brackets by sliding them in place. The EKD can be mounted to flow left or right.
4. Approximately 9 feet of clear vinyl beer line (C) is provided for the keg jumper line from each keg to its EKD. Trim clear line to size and attach one end to bottom input port of the EKD and the other end to the keg tap.
5. Approximately 9 feet of red air line (D) is provided for the jumper line from each keg to its regulator (E). Trim red air line to size and attach one end to the regulator and the other end to the keg tap.
6. Attach the polyline (F) from the beer line set (conduit) to the side output port of each EKD.
7. Approximately 6 feet of exhaust line (G) is provided for the exhaust port of each EKD. Trim the exhaust line to length and attach to each EKD exhaust port so the exhaust can be drained to a bucket. No clamp is required.
8. The keg regulators (E) provide individual pressure to each keg. Upon start up, the ideal gauge pressure will depend on the type of gas involved as well as the length of the line runs. The goal is to achieve a flow rate of 2 ounces per second.

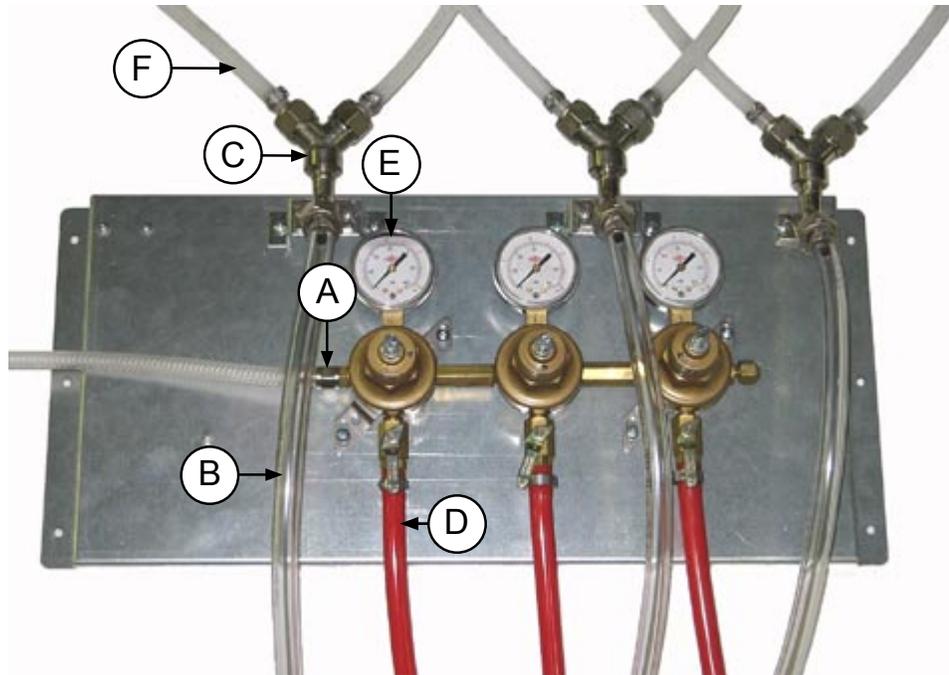


These instructions assume that the primary regulator and CO2 line to the walk-in cooler are already installed.

1. Position the regulator panels according to factory instructions.
2. Connect CO2 source line to one end of regulator bank (A). If there is more than one panel, continue the line to the next panel until all panels are connected
3. Approximately 9 feet of clear vinyl beer line (B) is provided for the keg jumper line from each keg to its Y angle bracket (C). Trim clear line to size and attach one end to bottom of Y angle bracket and the other end to the keg tap.
4. Approximately 9 feet of red air line (D) is provided for the jumper line from each keg to its regulator (E). Trim red air line to size and attach one end to the regulator and the other end to the keg tap.
5. Attach the polyline (F) provided in the beer line set (conduit) to the two top output ports of each Y angle bracket (C).
6. The keg regulators (E) provide individual pressure to each keg. Upon start up, the ideal gauge pressure will depend on the type of gas involved as well as the length of the line runs. Since each keg is being split to dispense out of two different faucets, the line runs between those two faucets must be balanced. The goal is to achieve a flow rate of 2 ounces per second. If you do not have an even flow rate out of each of the two faucets and are not certain of how to balance the system, consult the factory.

BIK-EY

Beer Panel Installation Instructions

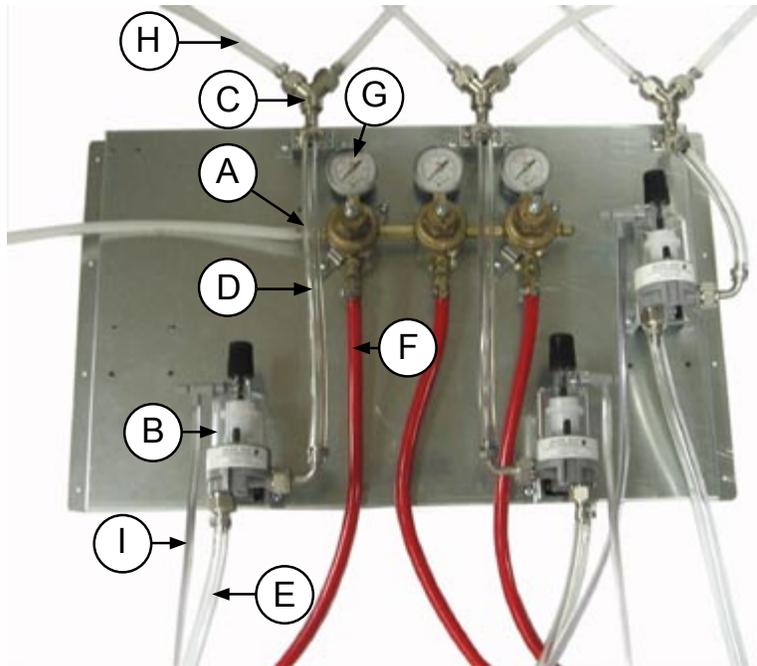

These instructions assume that the primary regulator and CO2 line to the walk-in cooler are already installed.

1. Position the regulator panels according to factory instructions.
2. Connect CO2 source line to one end of regulator bank (A). If there is more than one panel, continue the line to the next panel until all panels are connected
3. Attach an Empty Keg Detector (B) to each of the black EKD mounting brackets by sliding them in place. The EKD can be mounted to flow left or right. Position them so that the EKD output port points in the appropriate direction to flow to the corresponding Y angle bracket (C).
4. A jumper line (D) ships attached to the bottom of each Y angle bracket (C). Connect the free end of the jumper line to the side output port on the appropriate EKD. Use a black washer on the EKD end.
5. Approximately 9 feet of clear vinyl beer line (E) is provided for the keg jumper line from each keg to its EKD. Trim clear line to size and attach one end to the bottom input port of the EKD and the other end to the keg tap.
6. Approximately 9 feet of red air line (F) is provided for the jumper line from each keg to its regulator (G). Trim red air line to size and attach one end to the regulator and the other end to the keg tap.
7. Attach the polyline (H) from the beer line set (conduit) to the top output ports of each Y angle bracket.
8. Approximately 6 feet of exhaust line (I) is provided for the exhaust port of each EKD. Trim the exhaust line to length and attach to each EKD exhaust port so the exhaust can be drained to a bucket. No clamp is required.
9. The keg regulators (G) provide individual pressure to each keg. Upon start up, the ideal gauge pressure will depend on the type of gas involved as well as the length of the line runs. Since each keg is being split to dispense out of two different faucets, the line runs between those two faucets must be balanced. The goal is to achieve a flow rate of 2 ounces per second. If you do not have even flow rate out of each of the two faucets and are not certain of how to balance the system, consult the factory.