

INTERNAL THERMOSTAT ADJUSTMENT

Ranco Type

STEP 1.

Locate thermostat in the back of the cooler. Remove the two screws in the front of the thermostat face plate.




Remove two screws

STEP 2.

CAREFULLY remove thermostat from cooler. The thermostat is attached to a coil of copper tubing. Be very careful not to put any sharp bends or kinks in the copper tubing.

STEP 3.

Locate plastic cover on thermostat. Slide this cover off of the thermostat.

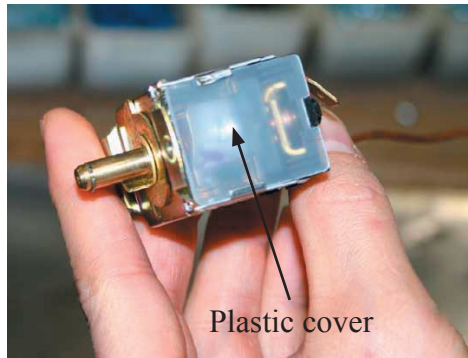


Plastic cover




STEP 4.

Locate small screw labeled COLD with an arrow pointing counter clockwise. With a screwdriver turn this screw 1/4 turn in a COUNTER CLOCKWISE direction. (Test the temperature before attempting to adjust again. Do not turn more than a total of 1/2 turn).

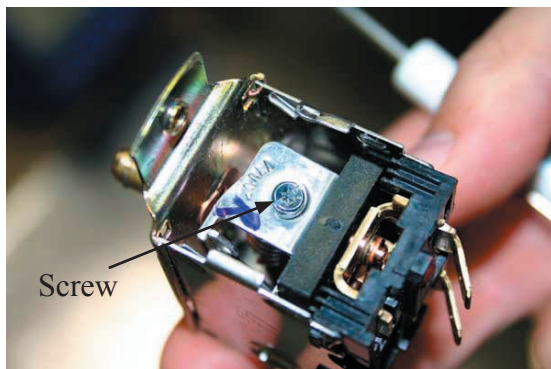

Screw

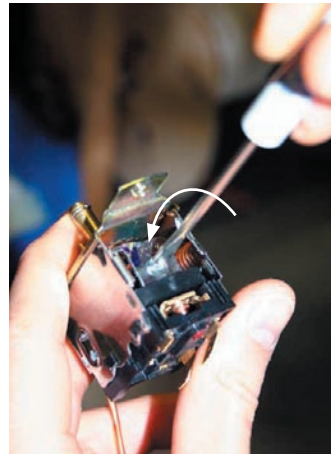

STEP 5.

Replace plastic cover. Place thermostat back into cooler (being very careful not to put any sharp bends or kinks in the copper tube). Reinstall cover and screw back in place.